



Orvi Pro 400 Motion Detector



User Guide

Please read instructions carefully before use

 
 
www.orvi.com.au

Whats in the box


1. Motion Detector
2. Wall Fixing Bracket
3. Screw Kit
4. User Guide




Appearance/Key Features

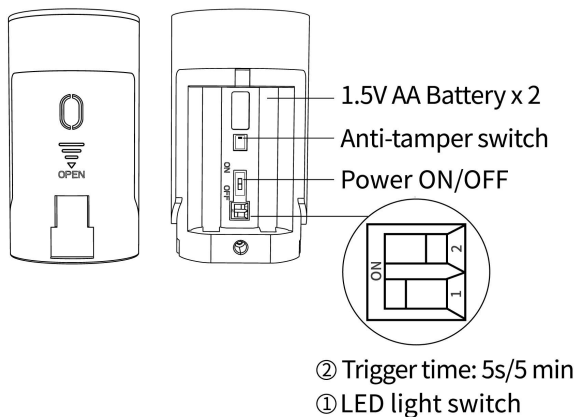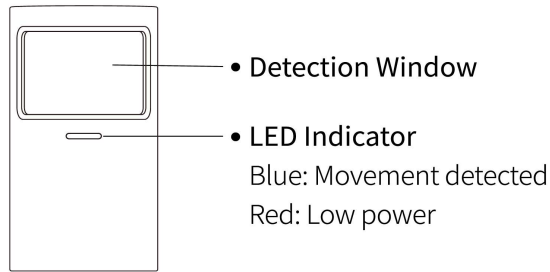

How to Install


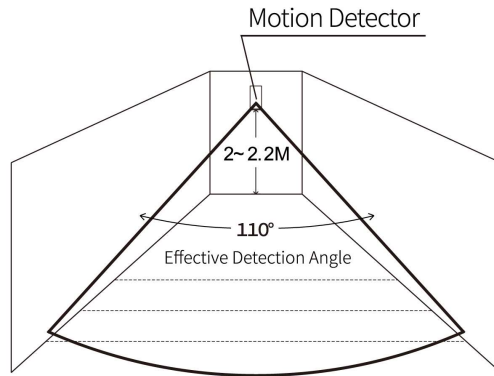 


 - (a) The recommended installation height is 2.0-2.2m above floor level.
- (b) Install motion sensor in a corner or a flat wall with no obstacles or blind spots.
- (c) The motion sensor should not be directly facing the cold or hot vents or cold or hot surfaces.
- (d) To minimize the likelihood of false alarms, avoid area where pets often move.

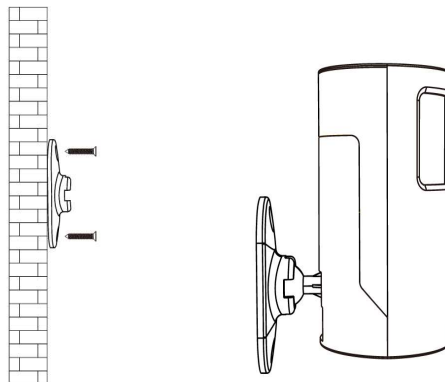


As shown above install the bracket on the wall using the screws provided, slide the motion detector onto the holder and press the assembly onto the wall bracket.

  Detection Area

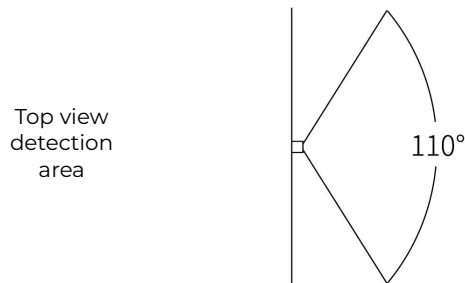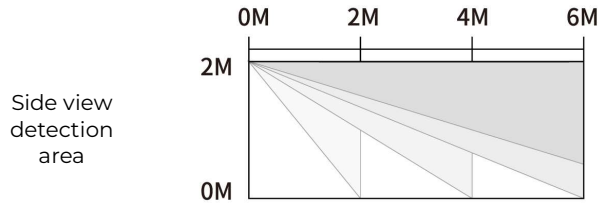

DIP Switch

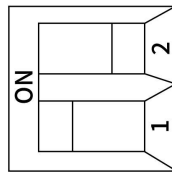 

Switch 1 - LED light switch

ON : LED light ON

OFF : LED light OFF

Switch 2 : Trigger Time (5 seconds to 5 minutes)

ON : 5 minutes delay for re-triggering

OFF : 5 second delay for re-triggering

Additional Information

- (1) Do not install the motion detector outdoors
- (2) Do not expose the motion detector to rain.
- (3) The motion detector cannot detect movement through glass such as someone moving on the other side of a window
- (4) Do not install the motion detector within 1 metre of a heat source such as electric heaters, vents or fireplaces or other heats sources that may create turbulent air.
- (5) Do not install the motion detector behind large appliances or furniture that may affect its signal transmission.
- (6) To avoid false alarms, install in areas where pets are less likely to get too close.

